

NORDIC CAB



USER GUIDE AND SAFETY INSTRUCTIONS
ENGLISH

Part list	
Plastic bottom base	1
Waterproof Dernier nylon cover	1
U-locking pin	1
Wheels (20 ") with fixed axle bolts	2
Tow bar including safety wire	1
Bike hitch	1
Wheel protector	2

USER GUIDE AND SAFETY INSTRUCTIONS

 **IMPORTANT!** Read the user manual carefully before use.

INTRODUCTION

Congratulations on your new Explorer Cargo and thank you for choosing Nordic Cab!

SAFETY INSTRUCTIONS

 **WARNING!** - Follow these instructions to avoid injury.

SYKLING:

Always use a well maintained bicycle with good brakes and correct air pressure in the tires. Check that air pressure in the tires for the bicycle and the cart match the recommended pressure every time you use the cart. Always follow the safety instructions when you are using this product.

The bicycle trailer can become overturned if used carelessly. Do not ride over holes or objects with high speed. Do not turn or ride downhill with high speed. Always turn carefully (5 km/h or less). The maximum speed for the bicycle trailer is 24km/h.

Maximum load:

For safety reasons, we state the total maximum weight of the carriage when cycling at 60 kg. Check that the weight on the end of the bicycle drawbar (where the bicycle attachment is mounted) is more than 2 kg, but does not exceed 9 kg with a fully loaded carriage.

Start and stop:

It is VERY different to ride with a bicycle trailer than without one. The higher weight means that acceleration and braking are significantly slower than when cycling without a trailer. A combination of a bicycle and a trailer is also significantly longer, and it is important to allow more time for crossing roads. Take also trailer's width in account when taking large turns.

Rules for safe cycling:

 **WARNING!**

- Do not make any modifications or alterations to the cart.
- Ensure before every ride that the bicycle trailer does not affect braking, movement of the pedals or steering of the bicycle.
- Use the cart only in accordance with the manufacturer's instructions, as this provides better safety.
- Maximum allowed total weight of the cart is 60 kg.
- If cleaning is needed, wash with mild soap and cold water. Do not use strong detergents.
- Ensure before every ride that the bicycle attachment is securely attached.
- Practise cycling with the trailer to gain better understanding of and more experience with the usage of bicycle trailer.

MAINTENANCE

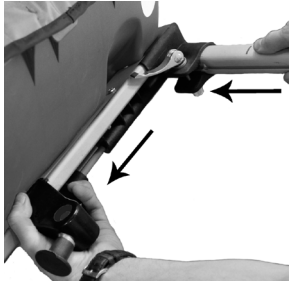 



Your Explorer is virtually maintenance-free. All metal parts are made of aluminium, stainless steel, chromed and/or zinc plated steel. Follow these simple maintenance instructions and your Explorer will stay pretty for years to come:





Wheels: Wash regularly and grease axle bolts.

Check the **bicycle attachment**, the hydraulic hose and the bicycle arm for wear and damage. Replace immediately if damage or significant wear is visible. Ensure always that straps or other loose parts cannot become entangled in the wheel.

Cargo cover - PU (plastic cover) protected, waterproof Denier polyester fabric. If cleaning is needed, wash with mild soap and cold water. Do not use strong detergents.

MONTERING AV SYKKELVOGN

			
<p>1. Tow bar</p> <p>Pull the locking pin (a big, spring loaded locking pin) on the left side (in the direction of travel) and insert the bicycle arm. Release the locking pin and push the tube in until it clicks in place.</p> <p>! IMPORTANT The end of the locking pin is red and should protrude approx. 3mm out on the side of the frame .</p> <p>! IMPORTANT Press down the metal handle on the plastic clamp so that the bicycle drawbar is firmly attached, or adjust with the screw on the underside of the clamp (prevents any rattling and wear).</p>	<p>2. Attach the safety wire around the locking pin</p> <p>After the bicycle arm is set in the correct position, attach the carbine hook on the safety cable to the red loop on the cart.</p> <p>! WARNING Before use, always check that the safety wire is properly fitted and sighted. Failure to use or misuse the safety wire could cause serious injury.</p>	<p>3. Attachment to bicycle</p> <p>Detach rear axle bolt from hub on the bicycle. ATTENTION: Be careful not to lose any small parts or springs. If your bicycle has a thick axle, the nut must be unfastened. Place the bicycle attachment over the axle bolt and attach it back to the hub exactly as you detached it. If the axle is thick, the nut is attached over the bicycle attachment.</p> <p>! IMPORTANT Tighten the axle bolt firmly with the lever so that the bicycle attachment is firmly attached. Use wrench or wrench if thick shaft.</p>	<p>4. Safety wire</p> <p>Insert the tip of the bicycle arm into the bicycle attachment. Lock the bicycle attachment securely to the arm with a U locking pin. Thread the safety cable around the bicycle frame (behind the fork) and back, and secure the hook on the cable. Tighten the cable while the plastic sleeve on the arm is placed towards the casing, and lock the cable by moving the bend on the bicycle arm (DO NOT USE FORCE)</p> <p>! WARNING Ensure that loose parts cannot come in contact with the bicycle wheel. Ensure that the bicycle attachment is properly attached to the bicycle and that the bicycle arm is properly attached to that attachment. Remember to check this every time you use the bicycle trailer.</p>

			
<p>5. Wheel</p> <p>Press the black button on the end of the axle bolt with your thumb. Insert the bolt in the frame.</p> <p>Release the button as you push the wheel in until you hear the axle bolt clicking in place.</p> <p> IMPORTANT Pull on the wheel to ensure it is securely locked in place.</p>	<p>Place the wheel protectors over the two screws on the side frame of the cart.</p> <p>Press down on the screws and push the wheel protector back until a spring (a metal tip) engages with the hole in the middle of the wheel protector.</p> <p>Repeat this on the other side of the cart.</p> <p> IMPORTANT Wheel protectors must always be used when the cart is used as a bicycle trailer.</p>		

WARRANTY

Nordic Cab Solutions AS grants 2-years warranty for defects in materials and workmanship. The warranty does not cover external ripping of fabric covers.

Nordic Cab Solutions AS or an authorised Explorer reseller are obligated to repair or replace a part faulty due manufacturing defect (with the exception of the tires) for 2 years after the original date of purchase.

2-years warranty, as mentioned above, applies only as long as Explorer is used in a normal manner and in accordance with the instructions and the user manual. The warranty includes only Explorer owners who present the original receipt from an authorised Explorer reseller or Nordic Cab Solutions AS.

No other verbal agreement, warranty, conditions, or other, shall apply to this agreement. This warranty does not apply if: The Explorer is misused, modified, damaged intentionally, rented out or neglected.

For warranty support, please visit www.nordiccab.com.

